



Actual product may appear different
than the product shown.

Please keep this instruction sheet for future reference,
as it contains important information.

Adult supervision is required.

Requires three "AA" batteries (included).

Adult assembly is required.


Tool required for assembly: Phillips screwdriver (not included).

fisher-price.com


Assembled Parts




Handlebar - 2 Pieces

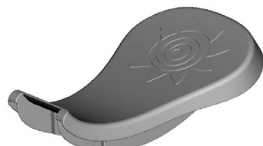


Seat

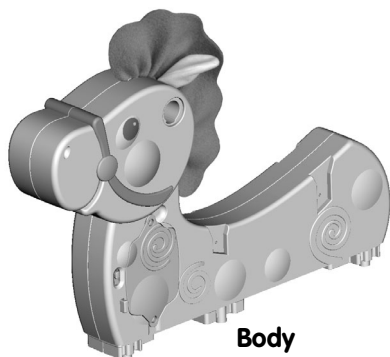

Body

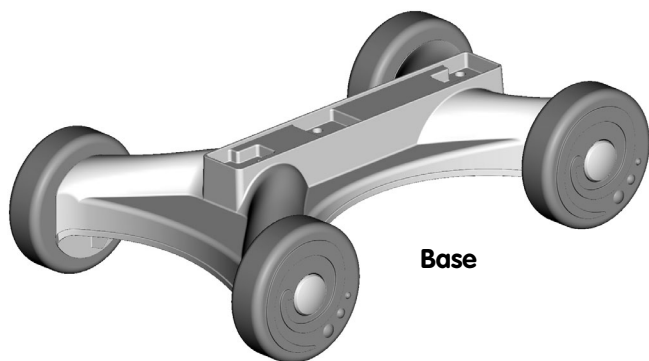

Base

 

#8 x 1/2" (1,3 cm) Screws – 11

Shown Actual Size


Note: Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten screws.

Assembly




CAUTION

This package contains small parts in an unassembled state. Adult assembly is required. Take extra care during unpacking and assembly.

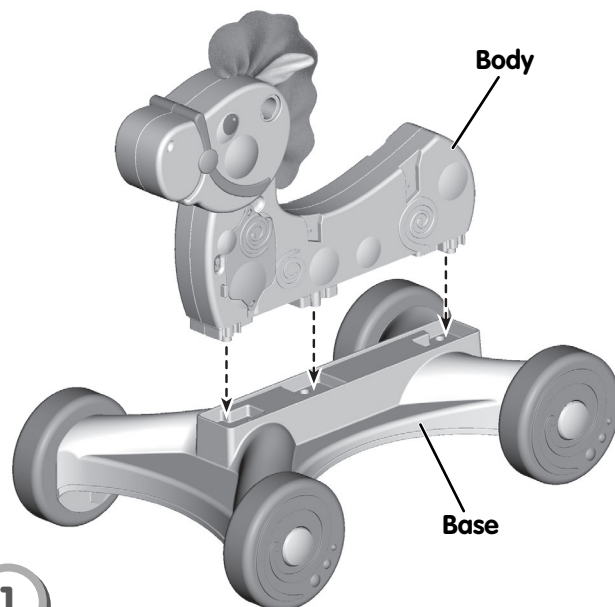

1

- Fit the body onto the base, as shown.

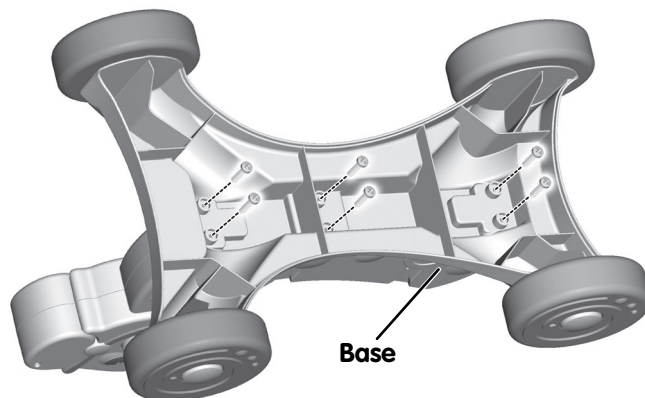


2


BOTTOM VIEW

- While holding the body and base together, carefully tip the assembly over.
- Insert six screws into the holes in the base and tighten.


Assembly

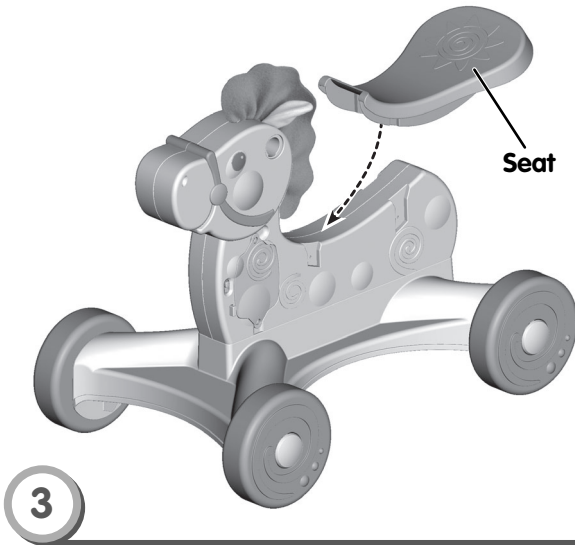

- Turn the assembly upright.
- Fit the seat onto the assembly.

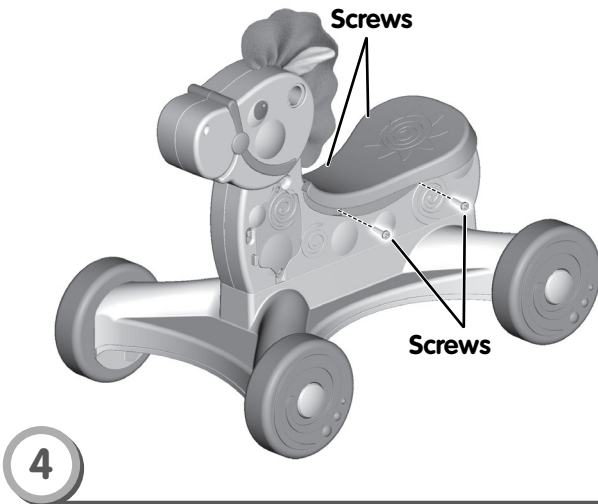

- Insert two screws into the holes on **each side** of the seat and tighten.

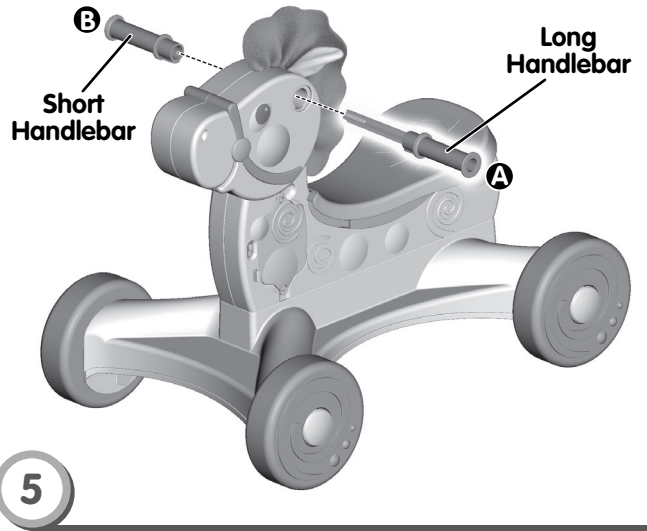


- First, insert the **long handlebar** through the hole in the pony head **A**.
- Hint: You may need to turn the long handlebar to fit it into the hole.*
- Then, insert the **short handlebar** through the hole on the other side of the pony head **B**.
 - While holding the handlebars in place, carefully tip the pony so that the short handlebar faces up.



- Insert a screw into the hole in the short handlebar and tighten.

Battery Replacement

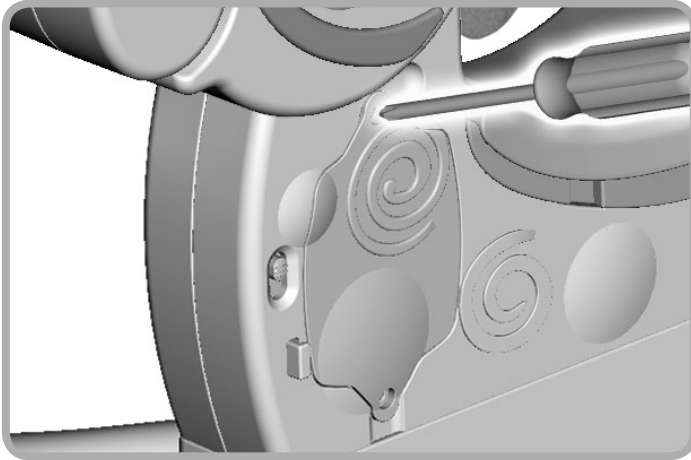


For best performance, we recommend that you replace the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.

- Locate the battery compartment side of the pony.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.
- If toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch on the toy off and then back on.
- When sounds become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

 Battery Safety Information



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


 
 
Roll-Along with Music

Press the
button on the
pony's head for
musical tunes.



Power/Volume Switch



- Slide the power/volume switch on the toy to on with low volume ; on with high volume  or off .
- Use with caution as this product requires skill to operate safely to avoid falls, collisions, and injuries to yourself (the rider) and others.
- Never use near steps.
- Choose areas for riding that are free of obstacles.
- Learn to stop safely.

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

 **service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Care

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- Periodically inspect this product for wear or damage. Check all nuts and bolts, and tighten as needed. Replace worn or broken parts immediately.

ICES-003

- This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.